

Mediwall Vertical Bedhead Unit

www.p-mgs.com



MANUFACTURED IN THE UK




LIP MEDICAL
HEALTHCARE DESIGN

Vertical Bedhead Service Trunking


The Mediwall vertical bedhead unit offers a compact stylish solution which can be manufactured to suit each individual installation. Supplied as a fully assembled unit, electrical sockets, nurse call, data and medical gases are fitted to meet each individual client specification.



Electrical sockets are fitted and can be fully wired and tested with essential/non essential sockets available for standard ward areas and blue isolated earth sockets for A&E, critical care or operating departments. Medical gas terminal units from all manufacturers can either be provided as a fully pre-gassed and tested system or alternatively, mounting provision can be included for installation on site.

All types of nurse call can be easily integrated with provision for a bespoke nurse call plate which can also fit the required number of data outlets. The design of the units ensures correct separation is maintained between electrical, data and medical gases.

Accessories such as medical rail can be fitted with the option of high level sockets and data also available where patient monitoring is required.

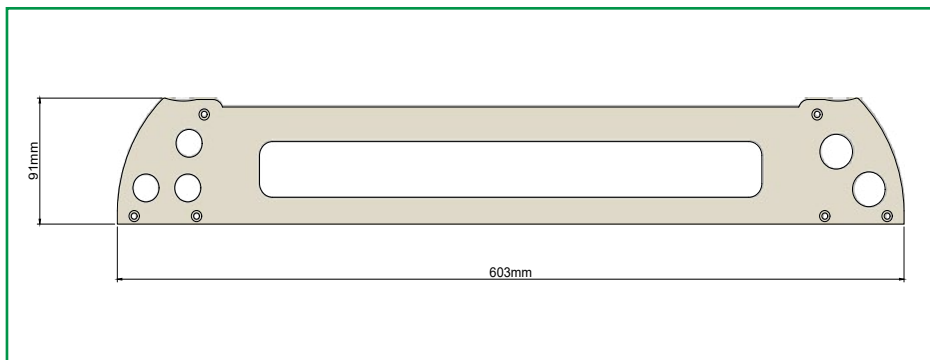

Specifications:

Vertical Bedhead Service Trunking

Electrical Socket Type	13A Switched/unswitched BS single or twin sockets - Quantity to client specification
Equipotential Sockets	POAG ID-6 as standard to client specification
Data Outlets	Single/Twin available to client specification
Gas Outlets	Quantities to suit project requirements - Pneumatech East/Zeus or Medaes gem 10 as standard
Nurse Call Provision	Compatible with all nurse call manufacturers
Construction	Powder coated aluminium extrusion with powder coated steel accessory plates to suit. Length to suit project requirements. Services entry from the top of the unit with gland points for electrical/data services and separate medical gas entry provided
Colour	RAL9010 as standard. Optional colours available on request
Assembly	Supplied as fully assembled modules as standard with optional pre gassing and prewiring if required

T: 01244 288 299
enquiries@lipmedical.com

Office

Unit 60 AML Zone 2, Deeside Industrial Estate, Third Avenue, Deeside, Flintshire, CH5 2LA

